

Communicative damper actuator for adjusting dampers in technical building installations

- Air damper size up to approx. 2 m<sup>2</sup>
- Nominal torque 10 Nm
- Nominal voltage AC/DC 24 V
- Control Modulating DC (0)2...10 V Variable
- Position feedback DC 2...10 V Variable
- · With connecting terminals
- · Communication via Belimo MP-Bus
- · Conversion of sensor signals







Nominal voltage	AC/DC 24 V
	50/60 Hz
	AC 19.228.8 V / DC 21.628.8 V
	3.5 W
	1.4 W
	6 VA
	Terminals 4 mm <sup>2</sup> (cable Ø 410 mm, 4-wire)
	Yes (note the performance data)
·	Min. 10 Nm
-	25%, 50%, 75% reduced
	DC 010 V
	Input impedance 100 kΩ
	Open-close
Control Signal 1 variable	3-point (AC only)
	Modulating (DC 032 V)
Operating range Y	DC 210 V
	Start point DC 0.530 V
operating range is variable	End point DC 2.532 V
Position feedback U	DC 210 V
	Max. 0.5 mA
	Start point DC 0.58 V
	End point DC 2.510 V
Position accuracy	±5%
	Selectable with switch 0 / 1
Direction of motion note	Y = 0 V: At switch position 0 (ccw rotation) / 1
	(cw rotation)
Direction of motion variable	Electronically reversible
Manual override	Gear disengagement with push-button, can be locked
Angle of rotation	Max. 95°
Angle of rotation note	can be limited on both sides with adjustable mechanical end stops
Running time motor	150 s / 90°
Motor running time variable	43173 s
Adaption setting range	manual
Adaption setting range variable	No action
	Adaption when switched on
	Adaption after pushing the gear disengagement
	button
Override control	MAX (maximum position) = 100%
	MIN (minimum position) = 0%
	ZS (intermediate position, AC only) = 50%
Override control variable	MAX = (MIN + 32%)100% MIN = 0%(MAX - 32%)
	ZS = MINMAX
Sound power level motor	35 dB(A)
Spindle driver	Universal spindle clamp 826.7 mm
Position indication	Mechanically, pluggable
Protection class IEC/EN	III Safety extra-low voltage
	Direction of motion variable Manual override  Angle of rotation Angle of rotation note  Running time motor Motor running time variable Adaption setting range Adaption setting range variable  Override control  Override control  Sound power level motor Spindle driver Position indication

# Damper actuator, communicative, Modulating, AC/DC 24 V, 10 Nm



#### **Technical data**

Protection class UL	UL Class 2 Supply
Degree of protection IEC/EN	IP54
Degree of protection NEMA/UL	NEMA 2, UL Enclosure Type 2
EMC	CE according to 2004/108/EC
Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14
Certification UL	cULus according to UL 60730-1A, UL 60730-2-
	14 and CAN/CSA E60730-1:02
Mode of operation	Type 1
Rated impulse voltage supply / control	0.8 kV
Control pollution degree	3
Ambient temperature	-3050°C
Non-operating temperature	-4080°C
Ambient humidity	95% r.h., non-condensing
Maintenance	Maintenance-free
Weight approx	0.80 kg

#### Safety notes



Weight

- The device must not be used outside the specified field of application, especially not in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea)water, snow, ice, insolation
  or aggressive gases interfere directly with the actuator and that is ensured that the
  ambient conditions remain at any time within the thresholds according to the data
  sheet.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- To calculate the torque required, the specifications supplied by the damper manufacturers concerning the cross-section, the design, the installation site and the ventilation conditions must be observed.
- The device contains electrical and electronic components and must not be disposed
  of as household refuse. All locally valid regulations and requirements must be
  observed.

#### **Product features**

#### Mode of operation

Conventional operation:

The actuator is connected with a standard modulating signal of DC 0...10V and drives to the position defined by the positioning signal. The measuring voltage U serves for the electrical display of the actuator position 0...100% and as slave control signal for other actuators.

Operation on the MP-Bus:

The actuator receives its digital positioning signal from the higher level controller via the MP-Bus and drives to the position defined. Connection U serves as communication interface and does not supply an analogue measuring voltage.

Converter for sensors

Connection option for a sensor (passive or active sensor or switching contact). The MP actuator serves as an analogue/digital converter for the transmission of the sensor signal via MP-Bus to the higher level system.

Parameterisable actuators

The factory settings cover the most common applications. Single parameters can be modified with the Belimo Service Tools MFT-P or ZTH EU.

Simple direct mounting

Simple direct mounting on the damper spindle with an universal spindle clamp, supplied with an anti-rotation device to prevent the actuator from rotating.

Manual override

Manual override with push-button possible (the gear is disengaged for as long as the button is pressed or remains locked).

High functional reliability

The actuator is overload protected, requires no limit switches in intermediate positions and automatically stops when the end stop is reached (at rest).

Adjustable angle of rotation

Adjustable angle of rotation with mechanical end stops.

 


#### **Product features**

#### Home position

The first time the supply voltage is switched on, i.e. at the time of commissioning, the actuator carries out a synchronisation. The synchronisation is in the home position (0%).

The actuator then moves into the position defined by the positioning signal.



### Adaption and synchronisation

An adaption can be triggered manually by pressing the "Adaption" button or with the PC-Tool. Both mechanical end stops are detected during the adaption (entire setting range).

Automatic synchronisation after pressing the gearbox disengagement button is configured. The synchronisation is in the home position (0%).

The actuator then moves into the position defined by the positioning signal.

A range of settings can be adapted using the PC-Tool (see MFT-P documentation)

#### **Accessories**

	Description	Туре
Gateways	Gateway MP to Modbus RTU, AC/DC 24 V	UK24MOD
	Gateway MP for BACnet MS/TP, AC/DC 24 V	UK24BAC
	Gateway MP to LonWorks, AC/DC 24 V, LonMark certified	UK24LON
	Gateway MP to KNX, AC/DC 24 V, EIBA certified	UK24EIB
	Description	Туре
Electrical accessories	Auxiliary switch, add-on, 1 x SPDT	S1A
	Auxiliary switch, add-on, 2 x SPDT	S2A
	Auxiliary switch, add-on, 2 x SPDT, grey	S2A GR
	Feedback potentiometer 140 Ohm, add-on	P140A
	Feedback potentiometer 140 Ohm, add-on, grey	P140A GR
	Feedback potentiometer 200 Ohm, add-on	P200A
	Feedback potentiometer 500 Ohm, add-on	P500A
	Feedback potentiometer 500 Ohm, add-on, grey	P500A GR
	Feedback potentiometer 1 kOhm, add-on	P1000A
	Feedback potentiometer 2.8 kOhm, add-on	P2800A
	Feedback potentiometer 2.8 kOhm, add-on, grey	P2800A GR
	Feedback potentiometer 1 kOhm, add-on, grey	P1000A GR
	Feedback potentiometer 5 kOhm, add-on	P5000A
	Feedback potentiometer 5 kOhm, add-on, grey	P5000A GR
	Feedback potentiometer 10 kOhm, add-on	P10000A
	Feedback potentiometer 10 kOhm, add-on, grey	P10000A GR
	Signal converter voltage/current, supply AC/DC 24V	Z-UIC
	Digital position indicator for front-panel mounting, 099%, front mass 72 x 72 mm	ZAD24
	Range controller for wall mounting, adjustable electron. Min./max. angle of rotation limitation	SBG24
	Positioner for wall mounting, range 0100%	SGA24
	Positioner in a conduit box, range 0100%	SGE24
	Positioner for front-panel mounting, range 0100%	SGF24
	Positioner for wall mounting, range 0100%	CRP24-B1
	Connecting cable 5 m, A+B: RJ12 6/6, To ZTH/ZIP-USB-MP	ZK1-GEN
	Connection cable 5 m, A: RJ11 6/4, B: Free wire end, To ZTH/ZIP-USB-MP	ZK2-GEN
	MP-Bus power supply for MP actuators, AC 230/24V for local power supply	ZN230-24MP
	Connecting board MP bus suitable for wiring boxes EXT-WR-FPMP	ZFP2-MP
	Description	Туре
Mechanical accessories	Actuator arm, for one-sided spindle clamp K-ENSA	AH-25
	Shaft extension 250 mm, for damper spindles Ø 825 mm	AV8-25

# Damper actuator, communicative, Modulating, AC/DC 24 V, 10 Nm $\,$



### Accessories

	Description	Туре	
	Angled ball joint with M8, suitable for damper crank arms KH8		
	Straight ball joint with M8, suitable for damper crank arms KH8	KG10A	
	Damper crank arm, for damper spindles	KH8	
	Spindle clamp, one side for NMA	K-ENMA	
	Spindle clamp, one side for NMA, SMA	K-ENSA	
	Spindle clamp, reversible for NMA and LMQ	K-NA	
	Angle of rotation limiter, for K-NA	20334-00001	
	Form fit insert 8x8 mm, for NMA	ZF8-NMA	
	Form fit insert 10x10 mm, for NMA / SMA	ZF10-NSA	
	Form fit insert 12x12 mm, for NMA / SMA	ZF12-NSA	
	Form fit insert 15x15 mm	ZF15-NSA	
	Form fit insert 16x16 mm, for NMA / SMA	ZF16-NSA	
	Mounting kit for linkage operation, NMA for flat installation	ZG-NMA	
	Universal mounting bracket 180 mm	Z-ARS180	
	Base plate extension from NMA to NM	Z-NMA	
	Position indication for LMA, NMA, SMA, GMA	Z-PI	
	Terminal protection IP54	Z-TP	
	Cable sleeve for Ø 4-6 mm, suitable for strain relief NG	43235-00001	
	Strain relief bushing (cable sleeve) for Ø 6-8 mm, suitable for strain relief NG $$	43235-00002	
	Cable sleeve for Ø 8-10 mm, suitable for strain relief NG	43235-00003	
	Description	Туре	
Service Tools	Service Tool, for MF/MP/Modbus/LonWorks actuators and VAV-Controller	ZTH EU	
	Belimo PC-Tool, software for adjustments and diagnostics	MFT-P	
	Adapter to Service-Tool ZTH	MFT-C	

#### **Electrical installation**




 
### Notes

- Connection via safety isolating transformer.
- Parallel connection of other actuators possible. Observe the performance data.

### Wiring diagrams

AC/DC 24 V, modulating

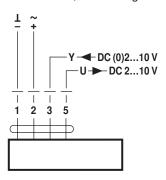




Operation on the MP-Bus



#### **Functions**

#### Functions when operated on MP-Bus

#### Connection on the MP-Bus

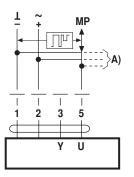

Connection of active sensors

## A) more actuators and sensors


## (max.8)

- Output signal DC 0...10 V (max. DC 0...32 V)

#### A) more actuators and sensors (max.8) • Supply AC/DC 24 V

#### • Resolution 30 mV


### Network topology

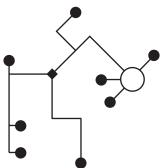

There are no restrictions for the network topology (star, ring, tree or mixed forms are permitted). Supply and communication in one and the same 3-wire cable

- · no shielding or twisting necessary
- · no terminating resistors required


#### Connection of external switching contact

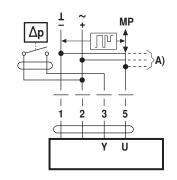

A) more actuators and sensors (max.8)

- Switching current 16 mA @ 24 V
- Start point of the operating range must be parameterised on the MP actuator as ≥ 0.5 V

#### Connection of passive sensors

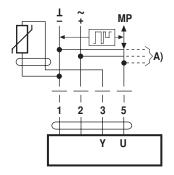


Ni1000	–28+98°C	8501600 Ω <sup>2)</sup>
PT1000	−35+155°C	8501600 Ω <sup>2)</sup>
NTC	-10+160°C 1)	200 Ω60 kΩ <sup>2)</sup>


- A) more actuators and sensors (max.8)
- 1) Depending on the type
- 2) Resolution 1 Ohm

#### Functions with basic values (conventional mode)

Override control with AC 24 V with relay contacts

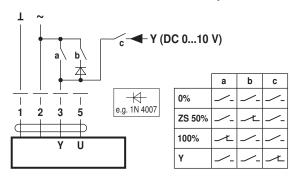


Override control with AC 24 V with rotary switch

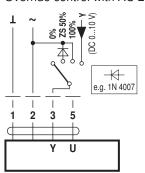





#### **Functions**


Remote control 0...100% with Minimum limit with positioner SG.. positioner SG..

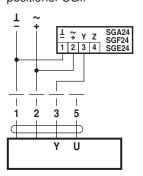


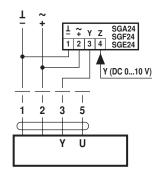


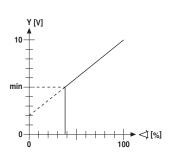


Follow-up control (position-dependent)

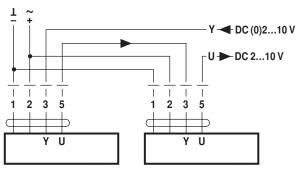

 

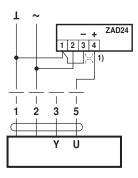


Control with 4...20 mA via external resistor

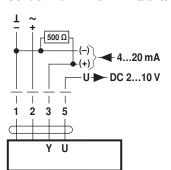

#### Caution:

The operating range must be set to DC 2...10 V.

The 500  $\Omega$  resistor converts the 4...20 mA current signal to a voltage signal DC 2...10 V

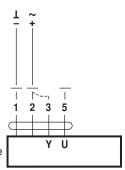

Functional check


(1) Adapting the direction of rotation

#### Procedure


- 1. Connect 24V to connections 1 and 2
- 2. Disconnect connection 3:
- with direction of rotation 0:
- Actuator rotates to the left
- with direction of rotation 1:
- Actuator rotates to the right
- 3. Short-circuit connections 2 and 3:
- Actuator runs in opposite direction

#### Functions for actuators with specific parameters (Parametrisation with PC-Tool necessary)

Override control and limiting with AC 24 V with relay contacts

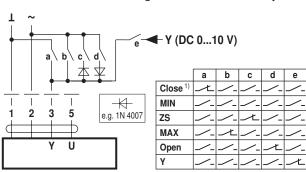

Override control and limiting with AC 24 V with rotary switch

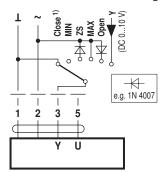


1) Caution: This function is only guaranteed if the start point of the operating range is defined as min. 0.5 V.




#### **Functions**


#### Control open-close

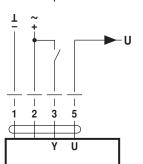

#### Control 3-point

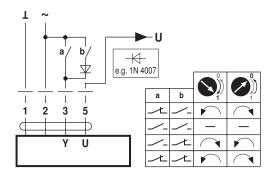

#### Operating controls and indicators

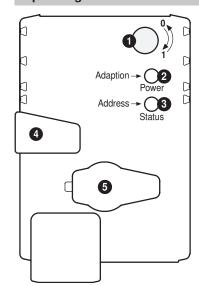

#### 1 Direction of rotation switch

Switch over: Direction of rotation changes

#### 2 Push-button and LED display green

Off: No power supply or malfunction

On: In operation

Press button: Triggers angle of rotation adaptation, followed by standard mode

#### 3 Push-button and LED display yellow

Off: Standard mode

Flickering: MP communication active

On: Adaptation or synchronising process active Flashing: Request for addressing from MP master Press button: Confirmation of the addressing

#### 4 Gear disengagement button

Press button: Gear disengages, motor stops, manual override possible Release button: Gear engages, synchronisation starts, followed by standard mode

#### 5 Service plug

For connecting parameterisation and service tools

### Check power supply connection

2 Off and 3 On Possible wiring error in power supply


#### Service



#### **Notes**

 The actuator can be parameterised by PC-Tool and ZTH EU via the service socket.


#### ZTH EU connection

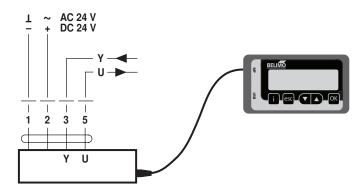




### Service

#### PC-Tool connection

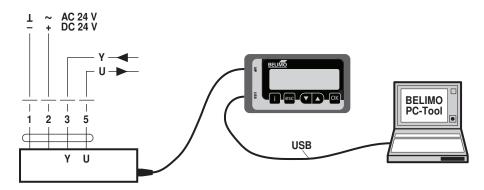


### **Dimensions [mm]**
 
### Spindle length




#### Clamping range

 

\*Option: Spindle clamp mounted below (accessories K-NA needed)

### **Dimensional drawings**

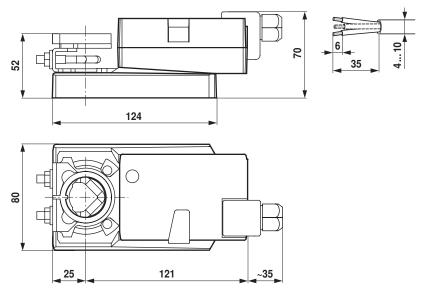

#### **Further documentation**

- Overview MP Cooperation Partners
- · Tool connections