

Communicative rotary actuator for butterfly valves

- Nominal torque 400 Nm
- Nominal voltage AC 230 V
- Control Modulating DC (0)2...10 V Variable
- Position feedback DC 2...10 V Variable
- Communication via BELIMO MP-Bus
- with 2 integrated auxiliary switches


**Technical data**

|                        |  |   |
|------------------------|--|---|
| <b>Electrical data</b> | Nominal voltage                          | AC 230 V  |
|                        | Nominal voltage frequency                | 50/60 Hz  |
|                        | Nominal voltage range                    | AC 207...253 V  |
|                        | Power consumption in operation           | 120 W   |
|                        | Power consumption in operation note      | incl. heating   |
|                        | Power consumption in rest position       | 5 W   |
|                        | Power consumption for wire sizing        | 138 VA  |
|                        | Current consumption                      | 0.6 A   |
|                        | Auxiliary switch                         | 2 x SPDT, 1 x 3° / 1 x 87°  |
|                        | Switching capacity auxiliary switch      | 1 mA...5 (3 inductive) A, DC 5 V...AC 250 V   |
|                        | Connection supply / control              | Terminals 2.5 mm <sup>2</sup><br>(Wire 2 x 1.5 mm <sup>2</sup> or 1 x 2.5 mm <sup>2</sup> ) |
| Parallel operation     | Yes (note the performance data)          |   |
| <b>Functional data</b> | Torque motor                             | 400 Nm  |
|                        | Positioning signal Y                     | DC 0...10 V   |
|                        | Positioning signal Y note                | Input impedance 100 kΩ  |
|                        | Operating range Y                        | DC 2...10 V   |
|                        | Operating range Y variable               | Start point DC 0.5...30 V<br>End point DC 2.5...32 V  |
|                        | Position feedback U                      | DC 2...10 V   |
|                        | Position feedback U note                 | Max. 0.5 mA   |
|                        | Position feedback U variable             | Start point DC 0.5...8 V<br>End point DC 2.5...10 V   |
|                        | Position accuracy                        | ±5%   |
|                        | Manual override                          | Temporary with handwheel (non-rotating)   |
|                        | Angle of rotation                        | 90°   |
|                        | Angle of rotation note                   | Internal limit switch, not adjustable   |
|                        | Running time motor                       | 18 s  |
|                        | Duty cycle                               | 75 % (= active time 18 s / operating time 24 s)   |
|                        | Sound power level motor                  | 70 dB(A)  |
|                        | Position indication                      | Mechanically (integrated)   |
| <b>Safety</b>          | Protection class IEC/EN                  | I Protective earth  |
|                        | Protection class auxiliary switch IEC/EN | I Protective earth  |
|                        | Degree of protection IEC/EN              | IP67  |
|                        | EMC                                      | CE according to 2004/108/EC   |
|                        | Low voltage directive                    | CE according to 2006/95/EC  |
|                        | Mode of operation                        | Type 1  |
|                        | Control pollution degree                 | 4   |
|                        | Ambient temperature                      | -30...65°C  |
|                        | Non-operating temperature                | -30...80°C  |
|                        | Ambient humidity                         | 95% r.h., non-condensing  |
|                        | Maintenance                              | Maintenance-free  |
| <b>Mechanical data</b> | Connection flange                        | F10   |
|                        | <b>Weight</b>                            | Weight approx. 22 kg  |
| <b>Materials</b>       | Housing material                         | Aluminium pressure casting  |

## Safety notes



- This device has been designed for use in stationary heating, ventilation and air conditioning systems and is not allowed to be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Caution: Power supply voltage!
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The device does not contain any parts that can be replaced or repaired by the user.
- The device contains electrical and electronic components and is not allowed to be disposed of as household refuse. All locally valid regulations and requirements must be observed.
- Warning: Leakage current possible (<3.5 mA)! When connecting the actuator, connect the earth first and then the supply connections! Do not disconnect the earth until after both supply connections have been disconnected!
- A change of the preset angle of rotation limitation may not take place neither by means of limit switches nor by means of PC-Tool/ZTH-... .

## Product features

|                                    |  |
|------------------------------------|--|
| <b>Principle of operation</b>      | <p>Conventional operation:<br/>The actuator is connected with a standard modulating signal and travels to the position defined by the positioning signal. The measuring voltage U serves for the electrical display of the actuator position 0 ... 100% and as slave control signal for other actuators.</p> <p>Operation on the MP-Bus:<br/>The actuator receives its digital positioning signal from the higher level controller via the MP-Bus and travels to the position defined. Connection U serves as communication interface and does not supply an analogue measuring voltage.</p> |
| <b>Parameterisable actuators</b>   | The factory settings cover the most common applications. Input and output signals and other parameters can be altered with the BELIMO Service Tool, MFT-P.   |
| <b>Simple direct mounting</b>      | Simple direct mounting on the butterfly valve. The mounting orientation in relation to the butterfly valve can be selected in 90° (angle) increments.  |
| <b>Manual override</b>             | The butterfly valve can be closed (turn clockwise) and opened (turn anticlockwise) with the handwheel. The handwheel does not move while the motor is running.   |
| <b>Internal heating</b>            | An internal heater prevents condensation buildup.  |
| <b>High functional reliability</b> | Mechanical end stops limit the actuator to -2° and 92°. The internal limit switches interrupt the voltage supply to the motor. In addition, a motor thermostat provides overload protection and interrupts the voltage supply if the actuator is used outside of the specified temperatures.   |
| <b>Combination valve/actuator</b>  | Refer to the valve documentation for suitable valves, their permitted medium temperatures and closing pressures.   |
| <b>Signalling</b>                  | The integrated auxiliary switches are equipped with a gold/silver coating that permits integration both in circuits with low currents (mA range) and in ones with larger-sized currents (A range) in accordance with the specifications in the data sheet. It should be noted with this application however that the contacts can no longer be used in the milliampere range after larger currents have been applied to them, even if this has taken place only once.  |

Accessories


|                               | Description  | Type            |
|-------------------------------|--|-----------------|
| <b>Gateways</b>               | Gateway MP for BACnet MS/TP, AC/DC 24 V  | UK24BAC         |
|                               | Gateway MP to Modbus RTU, AC/DC 24 V   | UK24MOD         |
|                               | Gateway MP for LonWorks®, AC/DC 24 V, LonMark-certified  | UK24LON         |
|                               | Gateway MP to KNX/EIB, AC/DC 24 V, EIBA certified  | UK24EIB         |
| <b>Electrical accessories</b> | <b>Description</b>   | <b>Type</b>     |
|                               | Connecting cable 5 m, A+B: RJ12 6/6, To ZTH/ZIP-USB-MP   | ZK6-GEN         |
| <b>Service Tools</b>          | <b>Description</b>   | <b>Type</b>     |
|                               | Service Tool, for MF/MP/Modbus/LonWorks actuators and VAV-Controller<br>Belimo PC-Tool, software for adjustments and diagnostics | ZTH EU<br>MFT-P |

Electrical installation


**Notes** • Caution: Power supply voltage!

4-lead connection

4-lead system connection

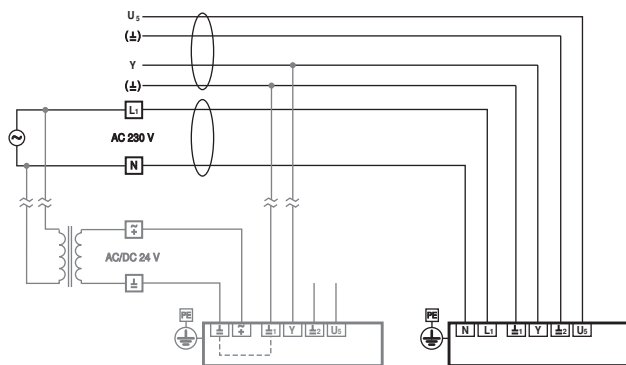

Electrical installation for 4-lead connection

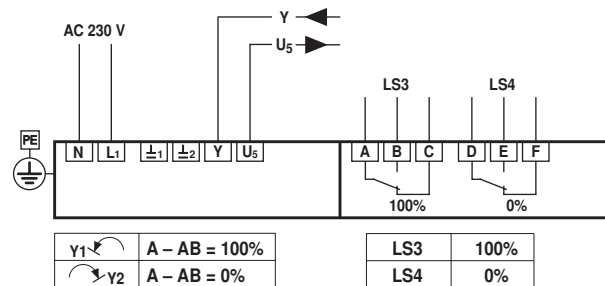


Functions


**Notes** • At supply interruption disconnect associated MP-Bus!

Functions when operated on MP-Bus

Connection on the MP-Bus

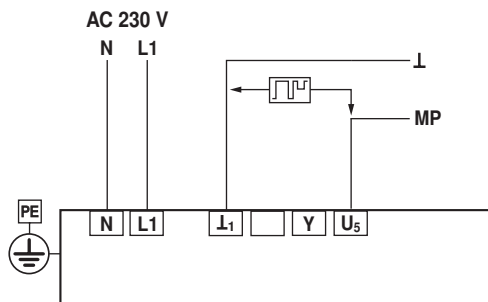

Network topology

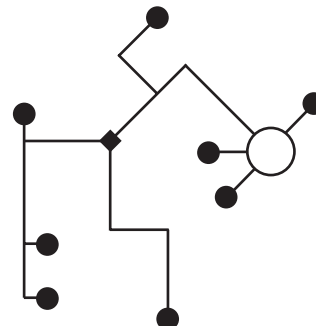


There are no restrictions for the network topology (star, ring, tree or mixed forms are permitted). Supply and communication in one and the same 3-wire cable


- no shielding or twisting necessary
- no terminating resistors required

**Functions**

MP-Bus system connection

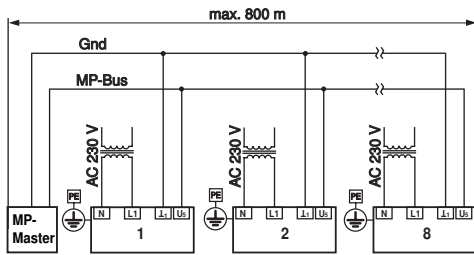

**Connection and function elements**

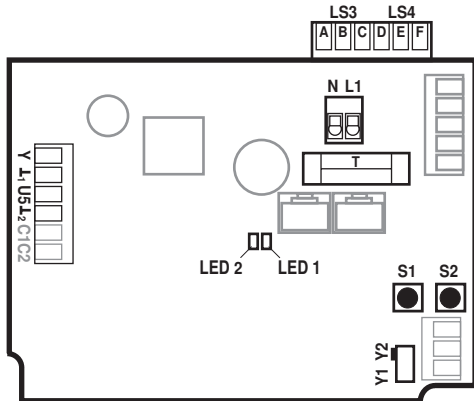


|                       |                              |   |
|-----------------------|------------------------------|---|
| <b>N / L1</b>         | Power supply voltage         |   |
| <b>Y1</b>             | Direction of rotation switch | Actuator rotates anticlockwise (ccw), valve opens   |
| <b>Y2</b>             | Direction of rotation switch | Actuator rotates clockwise (cw) valve closes  |
| <b>Y</b>              | Control signal               |   |
| <b>U5</b>             | Position feedback            |   |
| <b>L1 / L2</b>        | Ground 24 V-side             |   |
| <b>S1</b>             | Adaptation button            | Adaptation procedure is started (press S1 for 3 s)<br>Adaptation must take place after the TC1/TC2 have been adjusted |
| <b>S2</b>             | Addressing button            | Addressing procedure is started (press S1 for 3 s)  |
| <b>LED 1 (yellow)</b> | On<br>Off                    | Adaptation procedure activated<br>Standard operation  |
| <b>LED 2 (green)</b>  | On<br>Off                    | In operation<br>No voltage supply or fault  |
| <b>T</b>              | Plug-in fuse                 | Type T10A250V   |
| <b>LS3</b>            | Auxiliary switch             | Factory setting 87°   |
| <b>LS4</b>            | Auxiliary switch             | Factory setting 3°  |
| <b>C1 / C2</b>        | Not used                     |   |

**Settings**

**Notes**

- Limit switches TC1/TC2 and angle of rotation limitation are provided with sealing varnish and may not be adjusted.

**Setting cam** The setting cams for limit and auxiliary switches can be accessed by removing the housing cover. Optionally, auxiliary switches LS4 / LS3 can be connected for signalling. Limit switches LS2 / LS1 interrupt the voltage to the motor and are controlled by setting cams TC... The setting cams turn with the stem. The butterfly valve closes when the stem is turning clockwise (cw) and opens when the stem is turning counterclockwise (ccw).

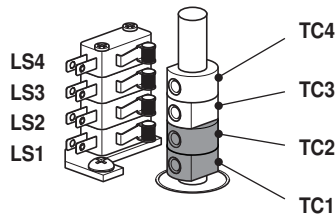

TC1/TC2 with sealing varnish: limit switches are secured against adjustment


**Settings of setting cams TC..**

- TC4 for auxiliary switch position closed (factory setting 3°).
- TC3 for auxiliary switch position open (factory setting 87°).
- TC2 for limit switch closed (0°).
- TC1 for limit switch open (90°).

## Settings

### Adjusting setting cams

- 1) Use a 2.5 mm Allen key to unscrew the corresponding setting cams TC..
- 2) Turn the setting cam using the Allen key
- 3) Set as shown in the illustration below
- 4) Use the Allen key to tighten the corresponding setting cams

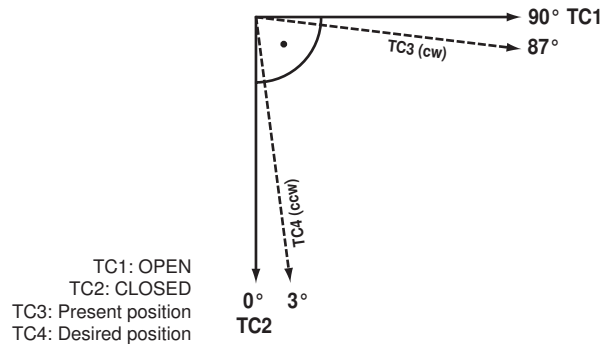


### Mechanical angle of rotation limitation


The mechanical angle of rotation (3) is set at the factory to  $-2^\circ$  and  $92^\circ$  and cannot be changed.

The handwheel is rotated by means of a worm gear in a planetary gear unit. The gearing is stopped mechanically by means of two setscrews (3).

Relationship between mechanical angle of rotation limitation, limit and auxiliary switches

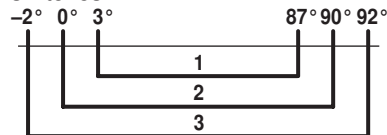

- 1: Auxiliary switch adjustable TC3 / TC4
- 2: Limit switch fix adjusted TC1 / TC2
- 3: Mechanical angle of rotation fix adjusted

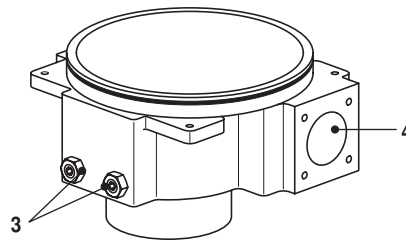

- 3: Angle of rotation limitation with sealing varnish:  
Must not be adjusted
- 4: Connection handwheel


## Service



## Notes

- Actuators may be parameterised with Belimo PC-Tool MFT-P or ZTH EU service tool using the service socket of the actuator.


Local connection with ZTH EU via service socket of the SY actuator.

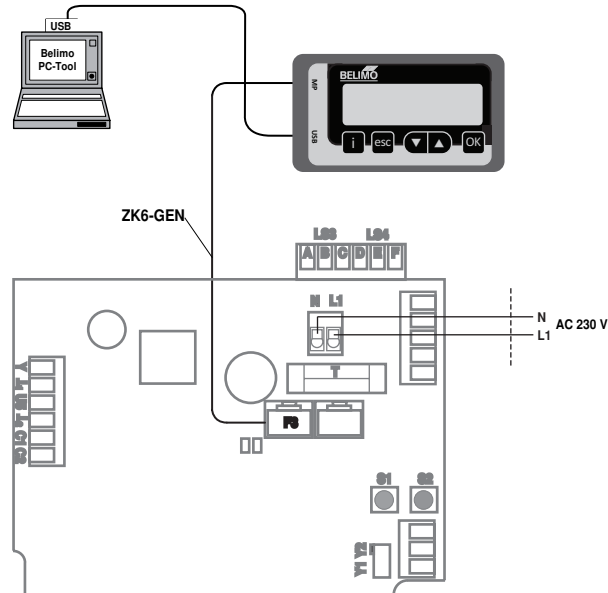

Note  
The housing cover must be opened so that the connections are accessible.

## Dimensions [mm]

## Dimensional drawings

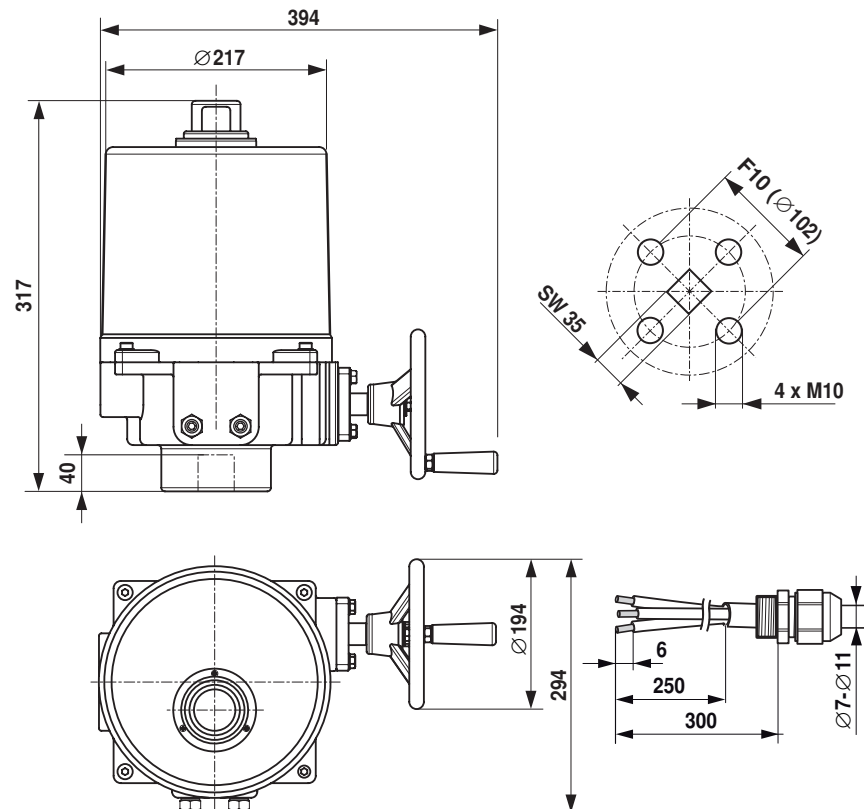

## Further documentation

- Data sheets for butterfly valves
- Installation instructions for actuators and/or butterfly valves
- Notes for project planning for butterfly valves